




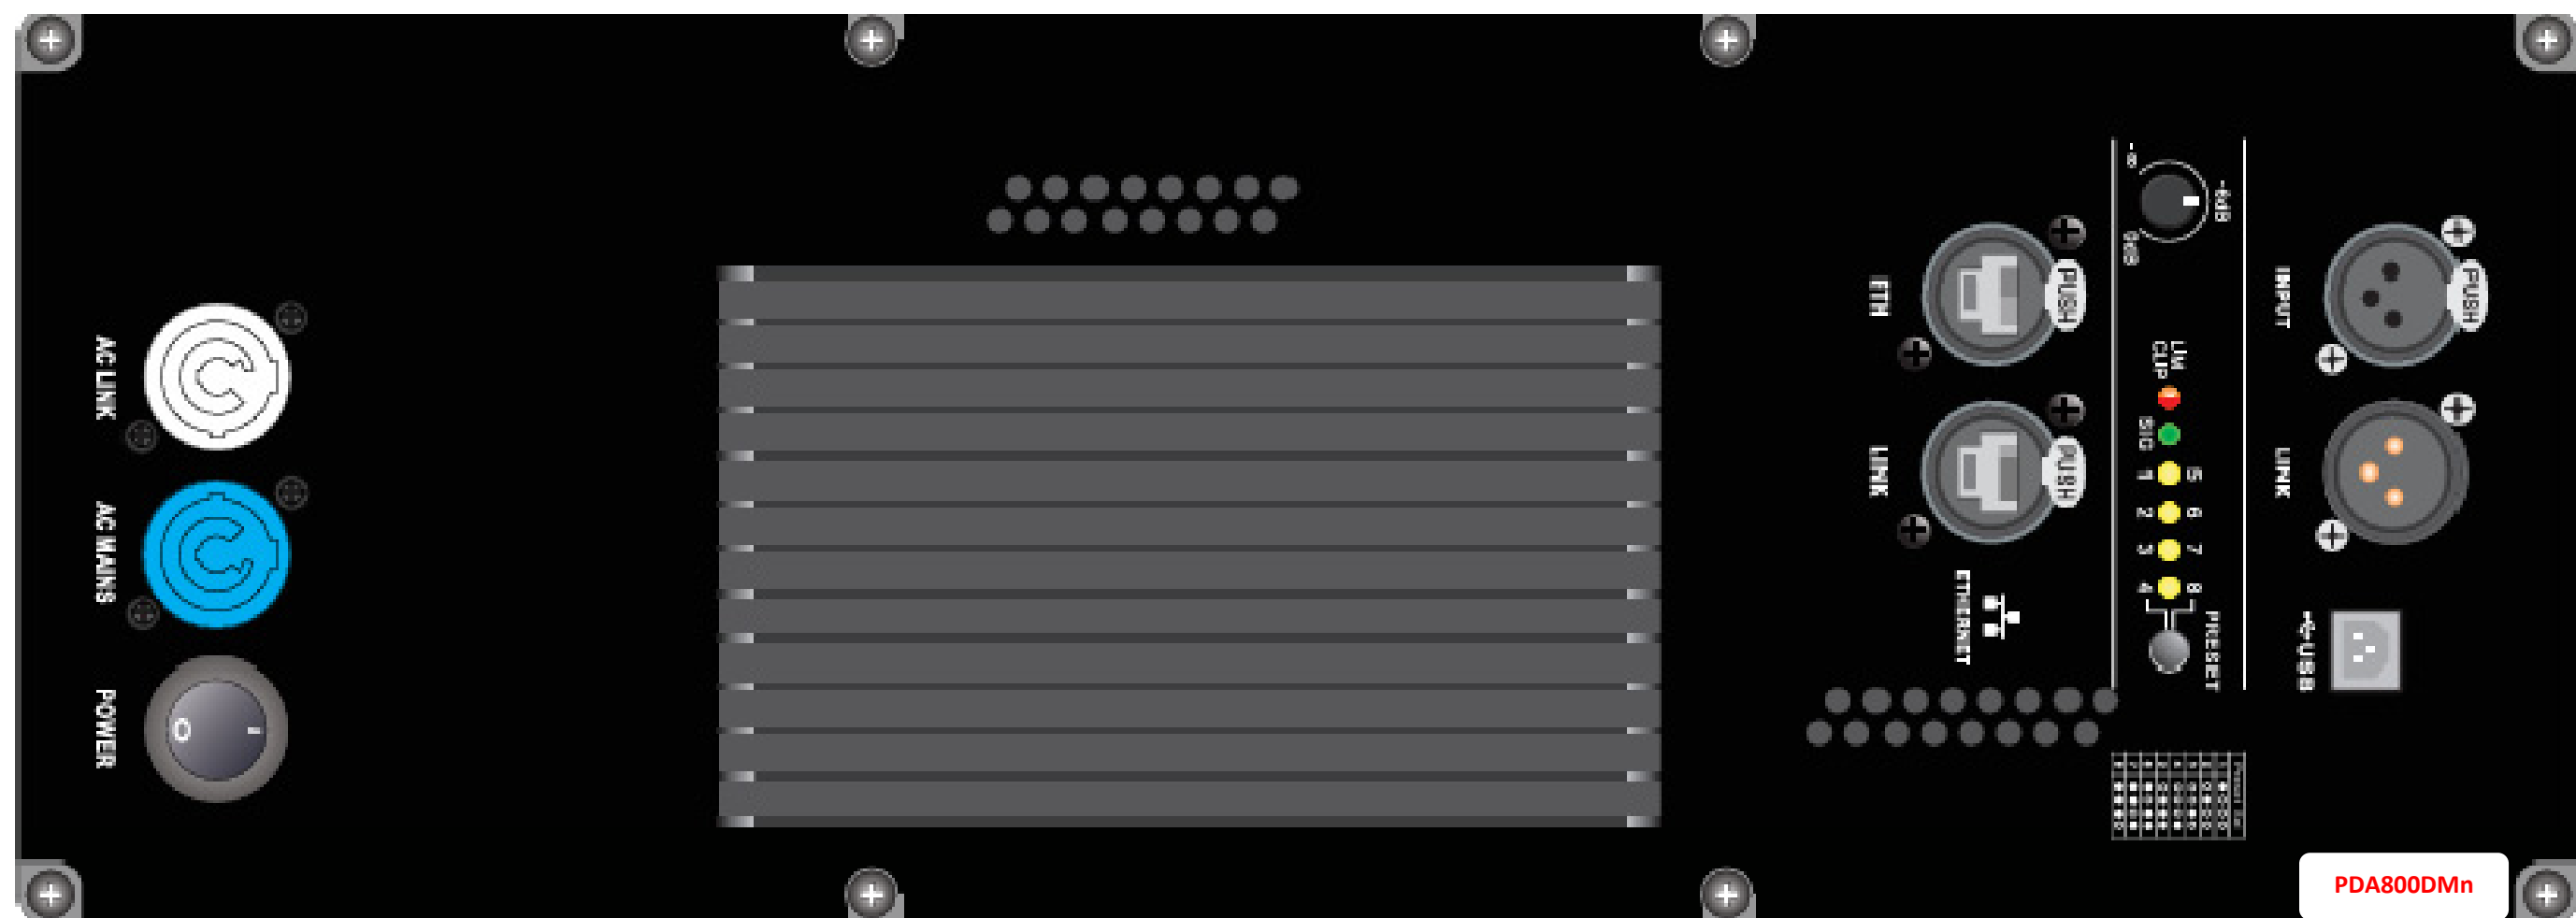

PDA800DMn

Hardware settings.

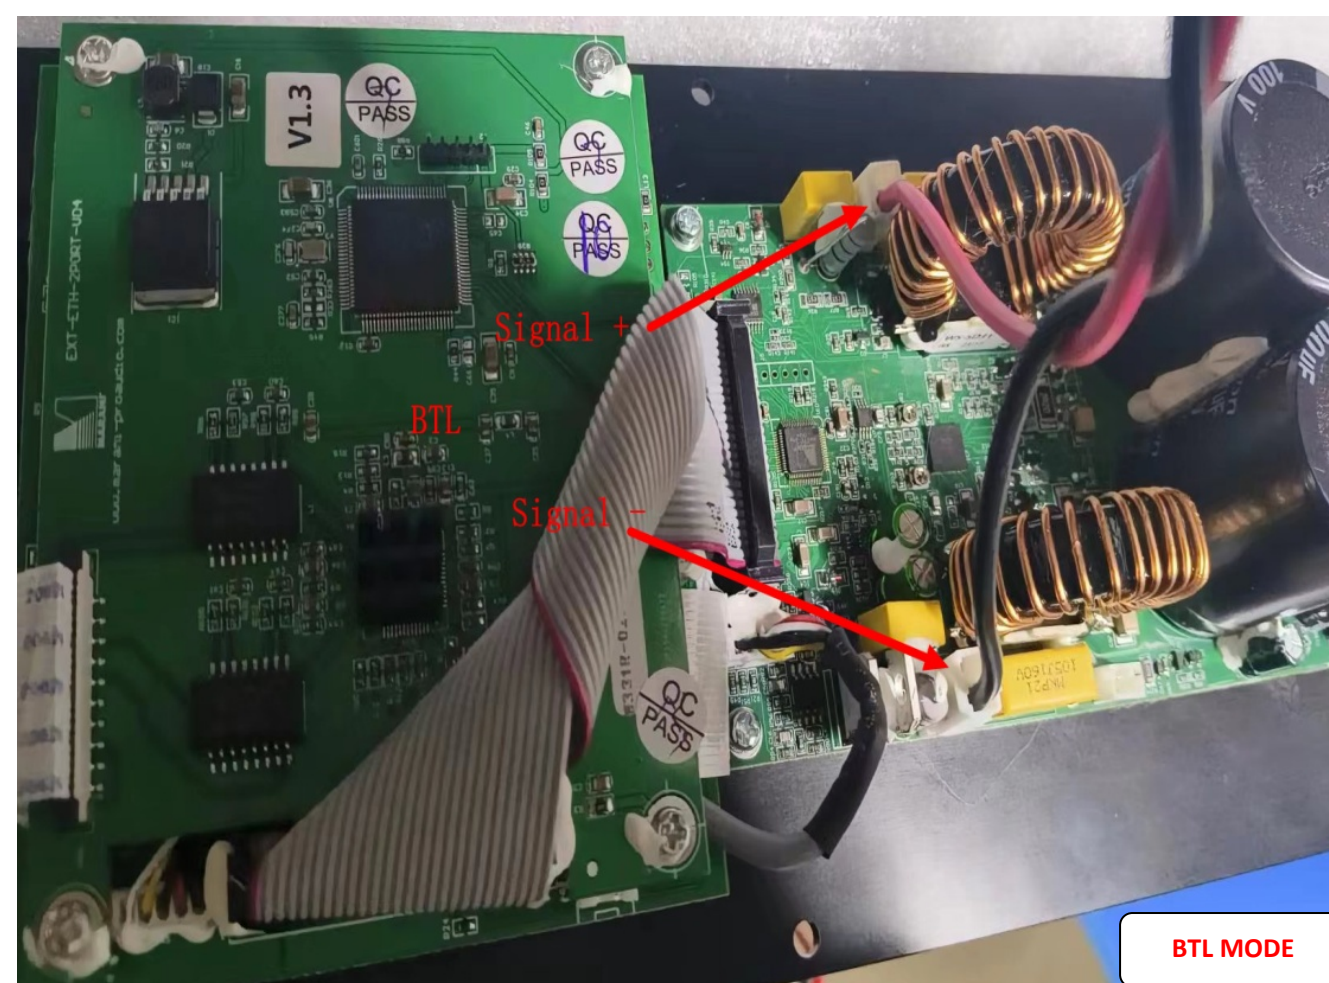

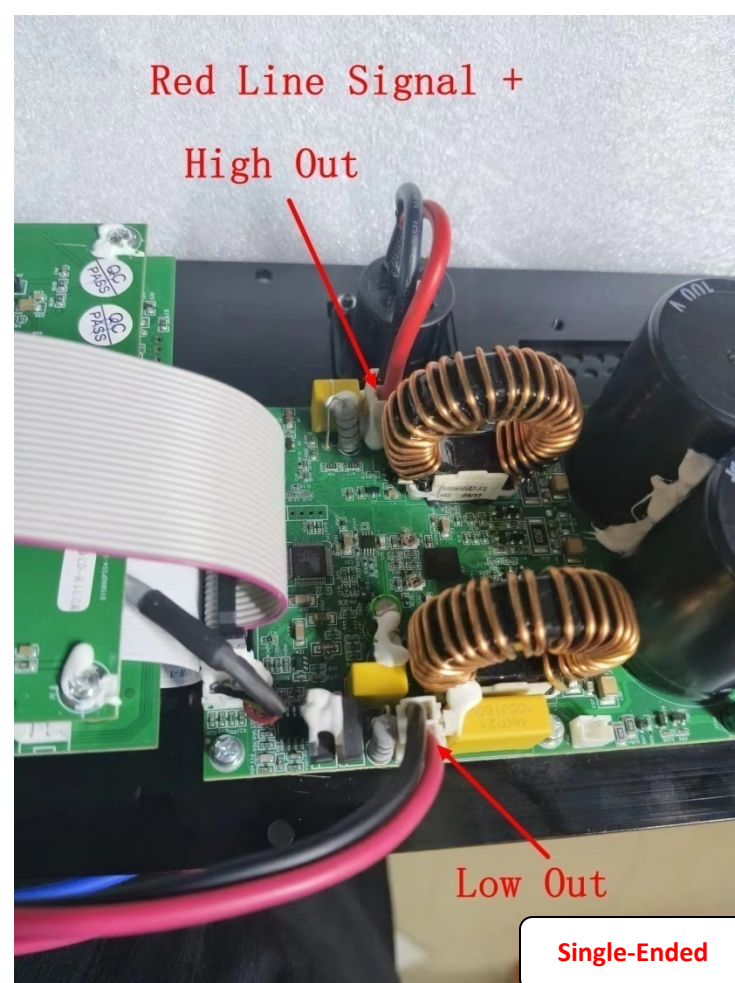

ON PDA800DMn PC software BTL MODE Settings.
First need to login as admin.

Admin Login

Insert Admin Password

Cancel OK

Login password
"000000"

PDA800DMn - IP:192.168.0.100 - P1: FACTORY PRESET

Single-Ended

Load Save Store Recall Factory Settings Logout GUI Panel Backup Restore FW Update AUTO EQ INPUT AEQ INPUT ROOM EQ PRE X-OVER LOW HIGH

INPUT SOURCE ANALOG 0 Gain [dB]

NOISE GENERATOR OFF

WHITE -50 Level [dBfs]

GROUP

GATE OFF LOUDNESS FILTER OFF HIGH PASS FILTER Slope/Type Bypass Frequency [Hz] 20 DELAY [ms] 0 POLARITY INV

PEQ

FLAT OFF




RMS COMPRESSOR OFF

AUTO CMP

Off-line

TEMPERATURE 25 PROTECT PDA800DMn POWERED BY MARANI DSP

Then, goto Settings page, “BRIDGE / LOAD”, ENABLE and APPLY

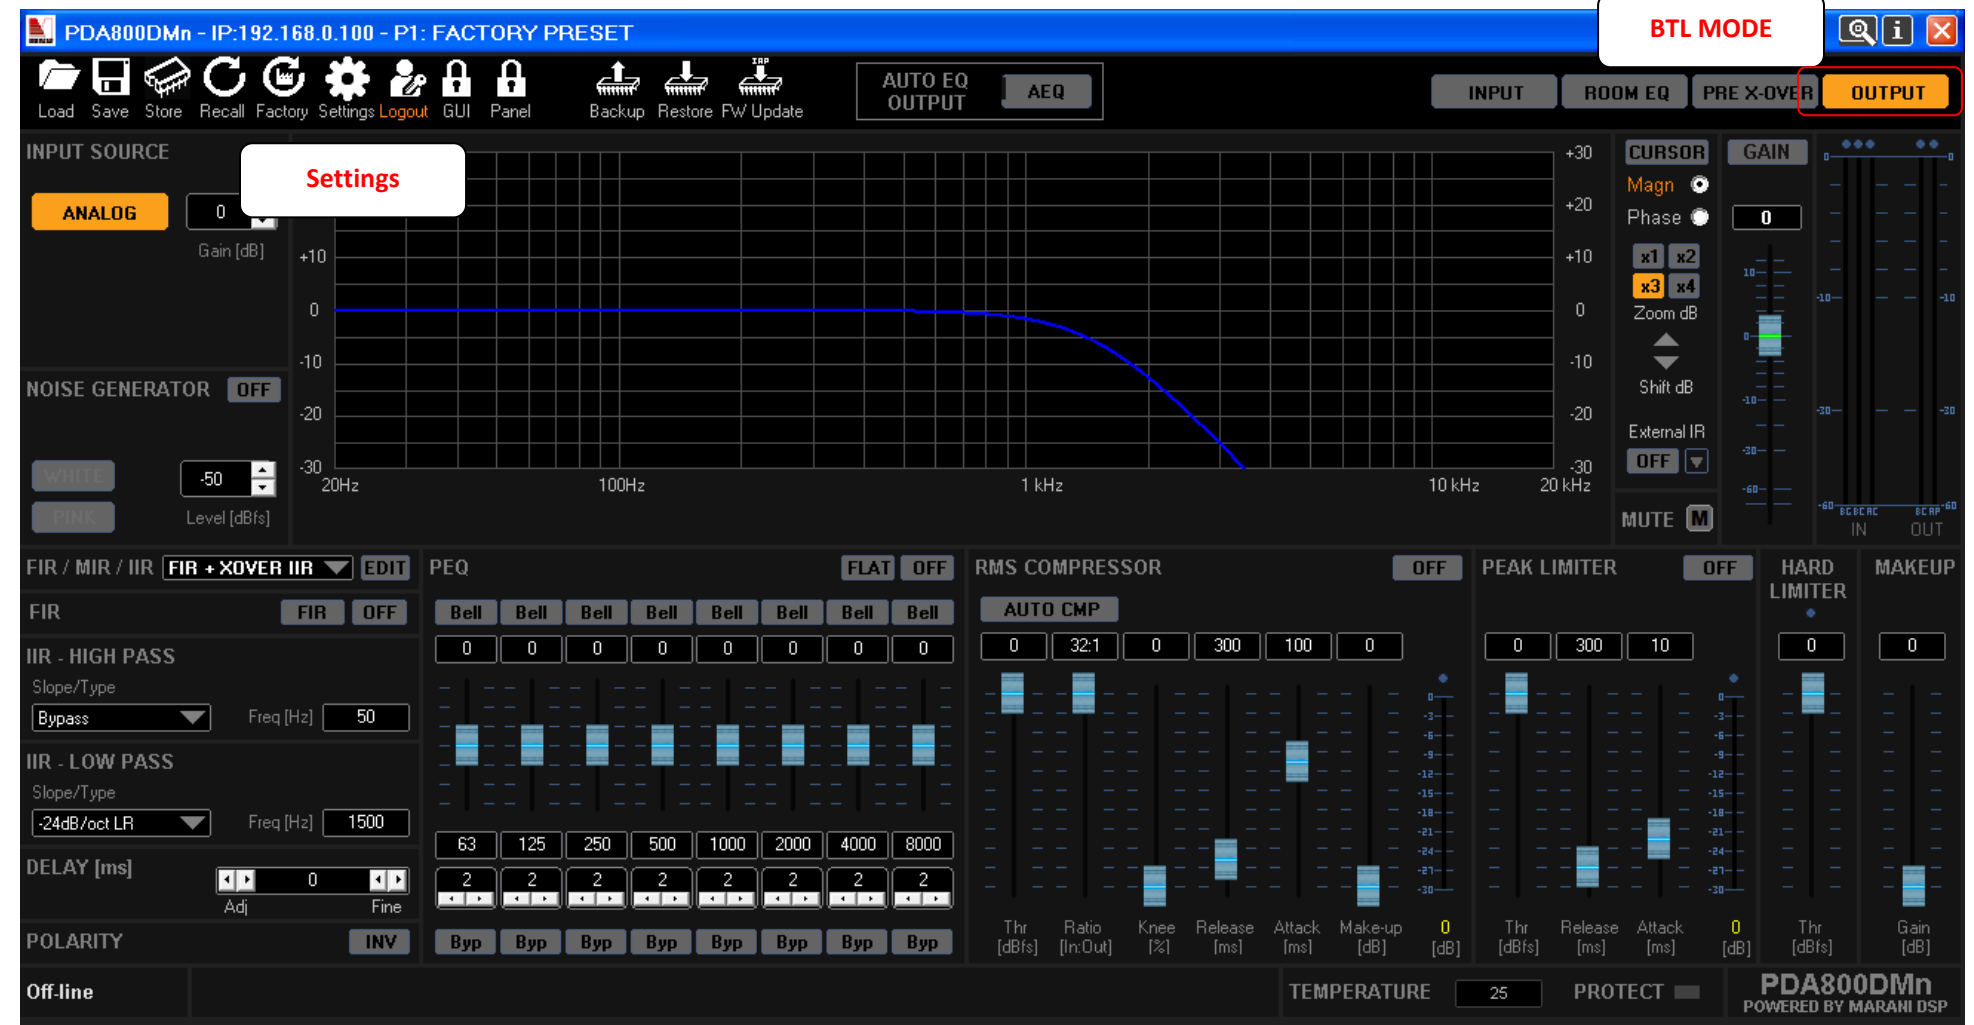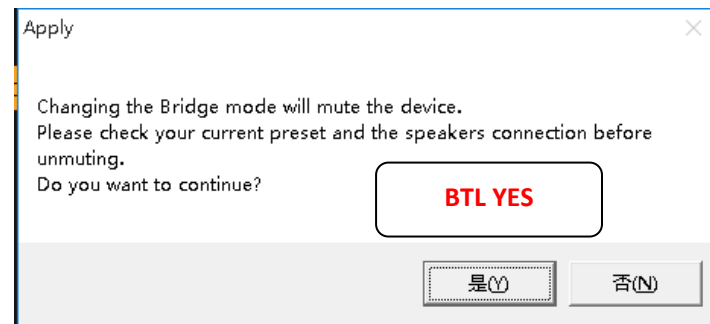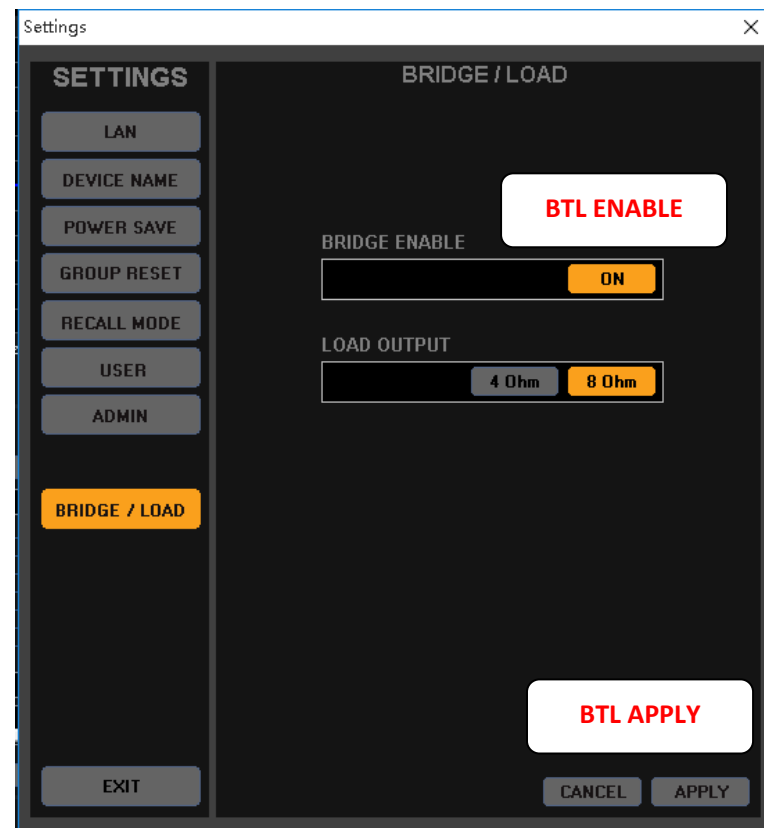

In “BRIDGE ENABLE = ON”, do not use 4Ohm !!!